



Leica Zeno 10/Zeno 15 User Manual



Version 4.1
English

- when it has to be **right**

Leica
Geosystems

Introduction

Purchase

Congratulations on the purchase of a Leica Zeno 10/Zeno 15.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "5 Safety Directions" for further information.

Read carefully through the User Manual before you switch on the product.

Product identification





The type and serial number of your product are indicated on the type plate. Enter the type and serial number in your manual and always refer to this information when you need to contact your agency or Leica Geosystems authorised service workshop.

Type: _____

Serial No.: _____

Symbols

The symbols used in this manual have the following meanings:

Type	Description
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

Trademarks





- Windows is a registered trademark of Microsoft Corporation in the United States and other countries
- CompactFlash and CF are trademarks of SanDisk Corporation
- Bluetooth® is a registered trademark of Bluetooth SIG, Inc.
- SD Logo is a trademark of SD-3C, LLC.



All other trademarks are the property of their respective owners.

Validity of this manual

This manual applies to the Zeno 10 and Zeno 15 GNSS/GIS handhelds. Differences between the various models are marked and described.

Available documentation

Name	Description/Format		
Zeno 10/Zeno 15 User Manual	All instructions required in order to operate the product to a basic level are contained in the User Manual. Provides an overview of the product together with technical data and safety directions.	✓	✓
Name	Description/Format		
Zeno GIS Getting Started Guide	Describes the general working of the product in standard use. Intended as a quick reference field guide.		✓

Name	Description/Format		
Zeno GIS Help *	Overall comprehensive help to the product and application functions. Included are detailed descriptions of special software/hardware settings and software/hardware functions.		

* only available as Online Help

Refer to the following resources for all Zeno 10/Zeno 15 documentation/software:

- the Leica Zeno GIS DVD
- <https://myworld.leica-geosystems.com>



myWorld@Leica Geosystems (<https://myworld.leica-geosystems.com>) offers a wide range of services, information and training material.

With direct access to myWorld, you are able to access all relevant services whenever it is convenient for you, 24 hours a day, 7 days per week. This increases your efficiency and keeps you and your equipment instantly updated with the latest information from Leica Geosystems.

Service	Description
myProducts	Simply add all Leica Geosystems products that you and your company own. View detailed information on your products, buy additional options or Customer Care Packages (CCPs), update your products with the latest software and keep up-to-date with the latest documentation.
myService	View the service history of your products in Leica Geosystems Service Centers and detailed information on the services performed on your products. For your products that are currently in Leica Geosystems Service Centers view the current service status and the expected end date of service.
mySupport	Create new support requests for your products that will be answered by your local Leica Geosystems Support Team. View the complete history of your Support and view detailed information on each request in case you want to refer to previous support requests.
myTraining	Enhance your product knowledge with the Leica Geosystems Campus - Information, Knowledge, Training. Study the latest online training material or download training material on your products. Keep up-to-date with the latest News on your products and register for Seminars or Courses in your country.

Table of Contents

In this manual	Chapter	Page
	1 Description of the System	11
	1.1 Overview	11
	1.2 Terminology	12
	1.3 System Concept	14
	1.3.1 Software Concept	14
	1.3.2 Power Concept	18
	1.3.3 Data Storage Concept	19
	1.4 CS Components	21
	1.4.1 CS10	21
	1.4.2 CS15	23
	1.5 Docking Station Components	25
	2 User Interface	26
	2.1 Keyboard	26
	2.2 Operating Principles	32
	3 Operation	33
	3.1 Equipment Setup	33

3.1.1	Fixing the Display Foil to the CS	33
3.1.2	Fixing a Hand Strap to the CS	35
3.1.3	Fixing the Slot Cover to the CS	36
3.1.4	Inserting and Removing a SIM Card	37
3.1.5	Setting up as Handheld GNSS	39
3.1.6	Setting up the Docking Station	41
3.1.7	Connecting to a Personal Computer	42
3.2	Power Functions	48
3.3	Batteries	50
3.3.1	Operating Principles	50
3.3.2	Changing the Battery	51
3.3.3	Charging the Battery	54
3.4	Working with the Memory Device	56
3.5	LED Indicators on CS10/CS15	60
3.6	LED Indicators on GG03	62
3.7	Using the Digital Camera	64
4	Care and Transport	66

4.1	Transport	66
4.2	Storage	67
4.3	Cleaning and Drying	68

5	Safety Directions	70
5.1	General Introduction	70
5.2	Definition of Use	71
5.3	Limits of Use	72
5.4	Responsibilities	73
5.5	Hazards of Use	75
5.6	Electromagnetic Compatibility EMC	80
5.7	FCC Statement, Applicable in U.S.	83
6	Technical Data	88
6.1	CS10/CS15 Technical Data	88
6.2	GS05/GS06 Technical Data	93
6.2.1	Tracking Characteristics	93
6.2.2	Accuracy	95
6.2.3	Technical Data	96
6.3	GG03 Technical Data	99
6.3.1	Tracking Characteristics	99
6.3.2	Accuracy	101
6.3.3	Technical Data	103
6.4	Antennas Technical Data	107
6.5	Conformity to National Regulations	110

Zeno 10/Zeno 15, Table of Contents	10
6.5.1 CS10	110
6.5.2 CS15	113
6.5.3 GG03	116
7 Software Licence Agreement	118
Appendix A Pin Assignments and Sockets	120
A.1 CS10/CS15	120
A.2 GG03	123
Index	125


1

1.1

Description of the System

Overview

System components

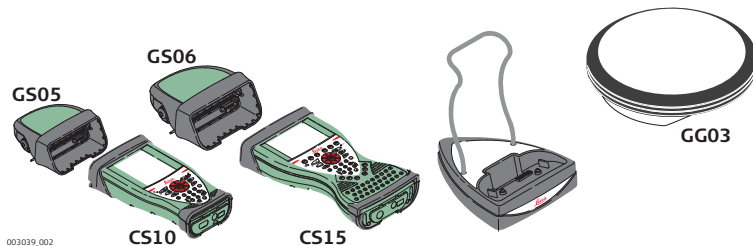

1.2

Terminology

CS general description


CS is a collective term describing the various models (CS10/CS15) of the multi-purpose field controller.

Zeno general description

Zeno is a collective term describing the various models (Zeno 10/Zeno 15) of the Leica Zeno GNSS/GIS handhelds:

- Leica Zeno 10: GNSS/GIS handheld consisting of CS10 field controller and GS05 GNSS cap.
 - Leica Zeno 15: GNSS/GIS handheld consisting of CS15 field controller and GS06 GNSS cap.
 - Leica Zeno Rover: GNSS/GIS rover consisting of CS10/CS15 field controller and GG03 antenna.
-

CS available models

Model	Touch screen	Colour display	Internal 3.5 GSM/ UMTS modem	Internal battery ^{*1}	SD card	CompactFlash card	Bluetooth	Wireless LAN 802.11b/g	Windows CE
CS10 GIS	✓	✓	-	✓	✓	✓	✓	-	✓
CS10 3.5G GIS	✓	✓	✓	✓	✓	✓	✓	✓	✓
CS15 GIS	✓	✓	-	✓	✓	✓	✓	-	✓
CS15 3.5G GIS	✓	✓	✓	✓	✓	✓	✓	✓	✓
 Use the supplied stylus on the screens of the touch screen.									

*1 removable

1.3 System Concept

1.3.1 Software Concept

Software for all CS models

Software type	Description
CS firmware (CS_xx.fw)	This software includes: <ul style="list-style-type: none">- The language-specific version of Windows CE.- The basic functionality of the CS.

Software for the GS05/GS06

Software type	Description
GS firmware (GS_xx.fw)	This software includes: <ul style="list-style-type: none">- The firmware for the measurement engine.


Software for the GG03

Software type	Description
GG firmware (GG_xx.fw)	This software includes: <ul style="list-style-type: none">- The firmware for the measurement engine.

Software upload



Uploading firmware can take some time. Ensure that the battery is at least 75% full before beginning the upload, and do not remove the battery during the upload process.

Software for	Description
All CS models	<p>The software is stored in the flash RAM of the CS field controller.</p> <p>CS firmware update instructions</p> <ul style="list-style-type: none">• Download the most recent CS firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction".• Connect the CS field controller to your PC. Refer to "3.1.7 Connecting to a Personal Computer".• Copy CS firmware file onto a folder on the Leica SD card, Leica CompactFlash card or USB stick.• Tap the Loader icon from the desktop, to run the Loader application.• Browse to the directory into which you copied CS firmware file, select it and start the upload.• A message will appear when the upload is complete. <p> Ensure that a Leica SD card or a Leica CF card is inserted into the CS field controller before starting the upload.</p>

Software for	Description
GS05/GS06	<p>The software is stored in the flash RAM of the GS05/GS06.</p> <p>GS firmware update instructions</p> <ul style="list-style-type: none">• Download the most recent GS firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction".• Connect the CS field controller to your PC. Refer to "3.1.7 Connecting to a Personal Computer".• Copy GS firmware file onto a folder on the Leica SD card, Leica CompactFlash card or USB stick.• Click on Start > Programs > Zeno Tools > Firmware, to run the Firmware loader application.• Browse to the directory into which you copied GS firmware file, select it and start the upload.

Software for	Description
GG03	<p>The software is stored in the flash RAM of the GG03.</p> <p>ME firmware update instructions</p> <ul style="list-style-type: none"> • Download the most recent GG firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction". • Connect the CS field controller to your PC. Refer to "3.1.7 Connecting to a Personal Computer". • Copy GG firmware file into the /SYSTEM directory of the Leica SD card or Leica CompactFlash card. • Connect the GG with the GEV234/GEV237 cable to the CS field controller and establish a connection between the GG and the CS field controller. Refer to the Leica Viva Technical Reference Manual (Connections.. - Connections..). • Start the upload. Refer to the Leica Viva GNSS Getting Started Guide (Appendix B Uploading System Files). • A message will appear when the upload is complete.

1.3.2

Power Concept

General

Use the Leica Geosystems batteries, chargers and accessories or accessories recommended by Leica Geosystems to ensure the correct functionality of the instrument.

Power options

Model	Power supply
all CS models	Internally by GEB211/GEB212 battery, OR Externally by docking station, OR Externally by GEV235 cable, OR Externally by GEV219 cable (only CS models with LEMO CBC01 connector module), OR Externally by GDC221 car adapter If an external power supply is connected and the internal battery is inserted, then the external power is used.
GS05/GS06	Externally by CS field controller
GG03	Internally by GEB211/GEB212 battery, OR Externally by GEV219 cable If an external power supply is connected and the internal battery is inserted, then the external power is used.

1.3.3

Data Storage Concept

Description

Data is stored on a memory device. The memory device can be an SD card, CompactFlash card, USB stick or internal memory.

Memory device

SD card: All CS field controllers have an SD card slot fitted as standard. An SD card can be inserted and removed. Available capacity: 1 GB.

CompactFlash card: All CS field controllers have a CF card slot fitted as standard. A CompactFlash card can be inserted and removed. Available capacity: 256 MB, 1 GB.

USB stick: All CS field controllers have a USB port fitted as standard.

Internal memory: All CS field controllers have an internal memory fitted as standard. Available capacity: 1 GB.



While other SD cards or CompactFlash cards can be used, Leica Geosystems recommends to only use Leica SD cards or Leica CompactFlash cards and is not responsible for data loss or any other error that can occur while using a non-Leica card.



Removing the SD card, CompactFlash card or USB stick while the CS field controller is turned on can cause loss of data. Only remove the SD card, CompactFlash card or USB stick or unplug connecting cables when the CS field controller is switched off.

Transfer data

Data can be transferred in various ways. Refer to "3.1.7 Connecting to a Personal Computer".



CompactFlash cards and SD cards can directly be used in an OMNI drive as supplied by Leica Geosystems. Other PC card drives can require an adaptor.


1.4

1.4.1


CS Components

CS10

Upside of CS10

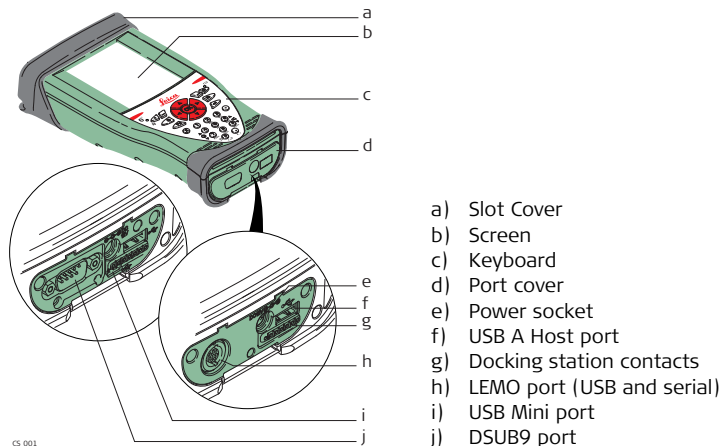

Underside of CS10

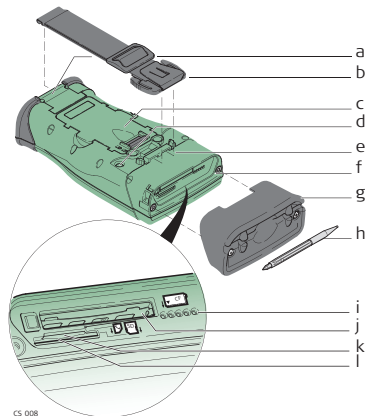


- a) Hand strap bottom clips
- b) Hand strap
- c) Battery compartment
- d) Digital camera
- e) Hand strap top clips
- f) Slots
- g) Slot cover
- h) Stylus
- i) GS05 contacts
- j) CompactFlash card slot
- k) SIM card slot
- l) SD card slot

CS_008


1.4.2

CS15

Upside of CS15

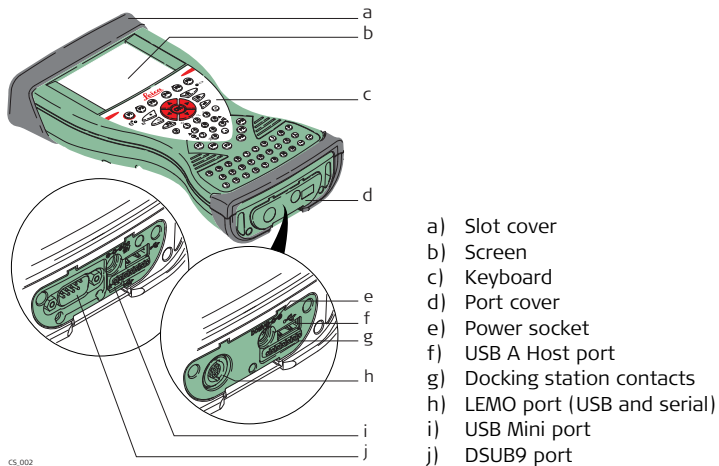

Underside of CS15

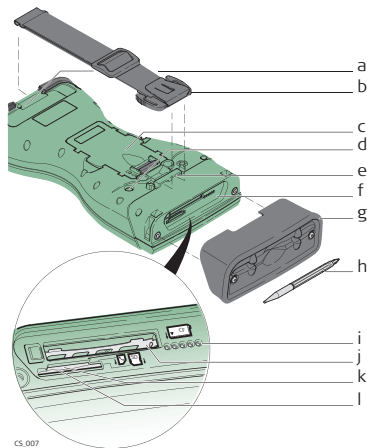


- a) Hand strap bottom clips
- b) Hand strap
- c) Battery compartment
- d) Digital camera
- e) Hand strap top clips
- f) Slots
- g) Slot cover
- h) Stylus
- i) GS06 contacts
- j) CompactFlash card slot
- k) SIM card slot
- l) SD card slot

1.5

Docking Station Components


Docking station

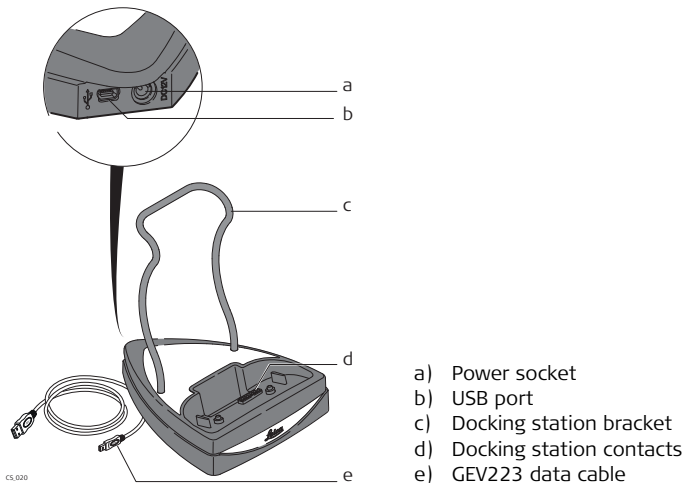

2 User Interface


2.1 Keyboard

Keyboard display CS10

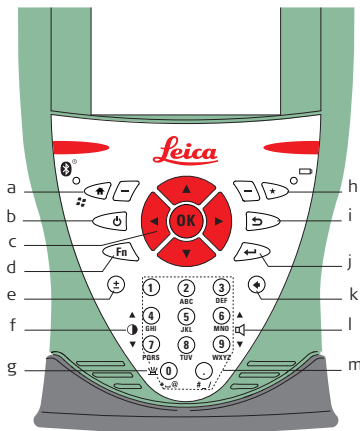



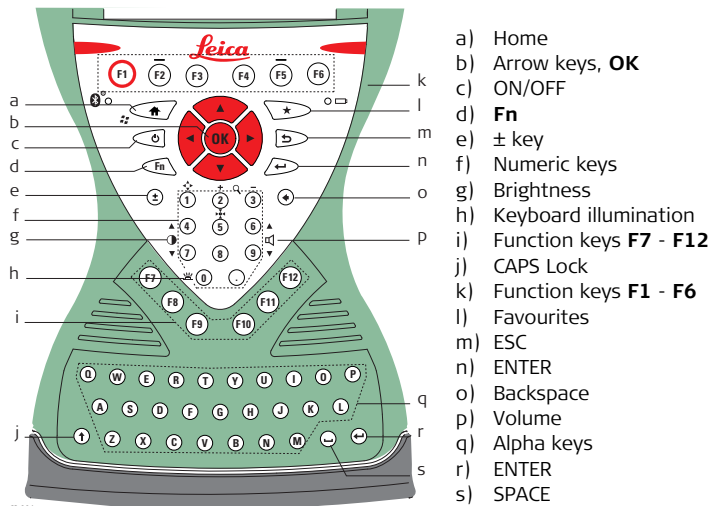


 







CS_005



Keyboard display CS15











Keys



Key	Function
Function keys F1-F6 	Correspond to six softkeys that appear on the bottom of the screen when the screen is activated.
Function keys F7-F12 	User definable keys to execute chosen commands or access chosen screens.
Alpha keys 	To type letters.
Numeric keys 	To type numbers.
Caps Lock 	Switches between upper case and lower case letters.
Backspace 	Clears all entry at the beginning of user input. Clears the last character during user input.
Esc 	Leaves the current screen without storing any changes.
Fn 	Switches between the first and second level of function keys.
Space 	Enters a blank.

Key		Function
Enter		<p>Selects the highlighted line and leads to the next logical menu/ dialog.</p> <p>Starts the edit mode for editable fields.</p> <p>Opens a selectable list.</p>
ON/OFF		<p>If CS10/CS15 already off: Turns on CS10/CS15 when held for 2 s.</p> <p>If CS10/CS15 in stand-by mode: Turns on CS10/CS15 when held < 2 s.</p> <p>If CS10/CS15 already on:</p> <ul style="list-style-type: none"> • Puts CS10/CS15 into stand-by mode when held < 2 s. Refer to "Putting CS field controller into stand-by". • Turns to Power Options menu when held for 2 s. Refer to "Power Options menu". • Turns off CS10/CS15 when held for 5 s.
Favourites		Goes to a website by simply clicking its name.
Home		Switches to the Windows CE Start Menu.

Key		Function
Arrow keys		Move the focus on the screen.
OK		Selects the highlighted line and leads to the next logical menu/ dialog. Starts the edit mode for editable fields. Opens a selectable list.

Key combinations

Key	Function
 + 	Hold Fn while pressing 4 . Increase the screen brightness.
 + 	Hold Fn while pressing 7 . Decrease the screen brightness.
 + 	Hold Fn while pressing 6 . Increase the volume for acoustic warning signals, beeps and keypresses on the CS field controller.
 + 	Hold Fn while pressing 9 . Decrease the volume for acoustic warning signals, beeps and keypresses on the CS field controller.

Key	Function
 + 	Hold Fn while pressing 0 . If keyboard illumination is already off: Turns on keyboard illumination. If keyboard illumination is already on: Turns off keyboard illumination.

2.2

Operating Principles

Keyboard and touch screen

The user interface is operated either by the keyboard or by the touch screen with supplied stylus. The workflow is the same for keyboard and touch screen entry, the only difference lies in the way information is selected and entered.

Operation by keyboard

Information is selected and entered using the keys. Refer to "2.1 Keyboard" for a detailed description of the keys on the keyboard and their function.

Operation by touch screen

Information is selected and entered on the screen using the supplied stylus.

Operation	Description
To select an item	Tap on the item.
To start the edit mode in editable fields	Tap on the editable field.
To highlight an item or parts of it for editing	Drag the supplied stylus from the left to the right.
To accept data entered into an editable field and exit the edit mode	Tap on the screen outside of the editable field.
To open a context-sensitive menu	Tap on the item and hold for 2 s.

3

3.1


3.1.1




Operation



Equipment Setup

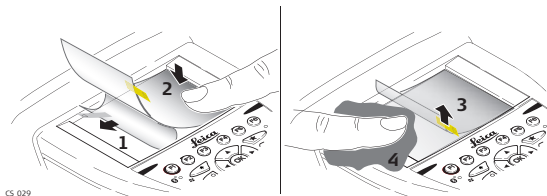Fixing the Display Foil to the CS

Fixing the display foil to the CS step-by-step




Step	Description
	Ensure that the display of the CS is free of dust and grease.
	The non-reflecting display foil has a silver-coloured sticker to peel away the carrier foil from the actual display foil.
1.	Touch the silver-coloured sticker with two fingers and pull it slowly upwards. The carrier foil is peeling away.  Do not peel the carrier foil more than 2 cm - 3 cm away.


Step	Description
2.	<p>Fix the laid open adhesive underside of the display foil at the display border.</p> <p> Pay attention that the display foil is not fixed between display and display frame.</p>
3.	<p>Peel away the carrier foil bit by bit and smooth it out slowly onto the display.</p>
4.	<p>Potential air bubbles between display and display foil have to be smoothed out using the included microfibre cloth.</p> <p> Do not use sharp objects!</p>

3.1.2

Fixing a Hand Strap to the CS

Fixing the CS to a hand strap step-by-step

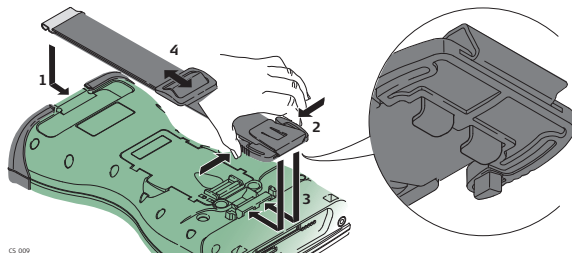


Step	Description
	Turn the CS field controller over.
1.	Take the end of the hand strap and clip it to the base of CS field controller.
2.	Compress the clips of the main hook.
3.	Lower the main hook onto the pivot knob of the CS field controller. A click can be felt when the clip is secure.
4.	Adjust the length of the hand strap.


3.1.3

Fixing the Slot Cover to the CS

Fixing the slot cover to the CS step-by-step

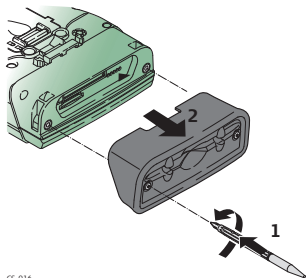


CS_016

Step	Description
1.	Press the screwdriver end of the supplied stylus on the quarter-turn screws and loosen them.
2.	Remove the slot cover.
	Reattach the slot cover with the stylus, making sure the quarter-turn screws are seated.


3.1.4


Inserting and Removing a SIM Card

Insert and remove a SIM card step-by-step

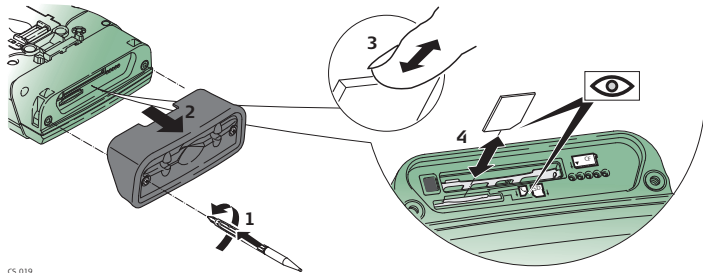

CS_019

	Description
	The SIM card is inserted into a slot inside the top of the CS10/CS15.
1.	Loosen the screws inside the slot cover on top of the CS10/CS15 using the screwdriver end of the stylus.
2.	Detach the slot cover from the CS10/CS15.
3.	Slide the card firmly into the slot until it clicks into position.

	Description
	 Do not force the card into the slot. The card should be held with the contacts facing the slot.
4.	Attach the slot cover and tighten the screws.
5.	To remove the card, detach the slot cover of the CS10/CS15.
6.	Gently press the top of the card to release it from the slot.
7.	Remove the SIM card and attach the slot cover.


3.1.5

Setting up as Handheld GNSS



The setup GS05/CS10 is identical to the setup GS06/CS15. For simplicity, the setup GS05/CS10 is used in the following.

Attaching the GS05 to the CS10 step-by-step

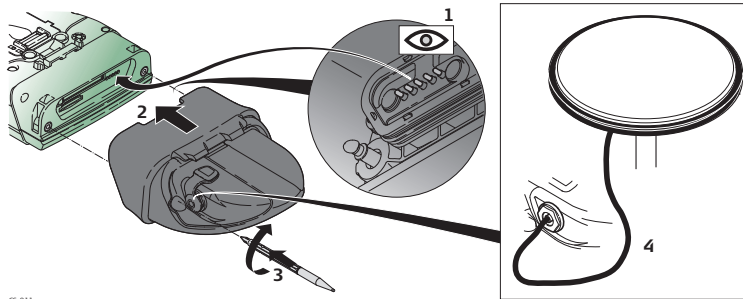

CS.011


Step	Description
	Detach the slot cover from the CS10. Refer to "3.1.3 Fixing the Slot Cover to the CS".
1.	Check the position of the contacts in the inner surface of the GS05.

Step	Description
2.	Attach the GS05 to the CS10.
3.	Press the screwdriver end of the supplied stylus on the quarter-turn screws and tighten them.
4.	To achieve the optimal satellite tracking performance, mount the AS05 (external GNSS antenna) on the GS05.


3.1.6

Setting up the Docking Station

Mounting components of the docking station step-by-step

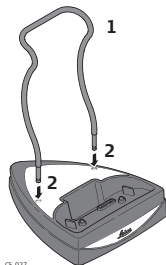

CS_027

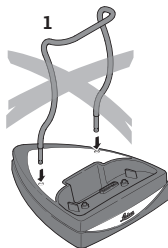

Step	Description
1.	Hold the docking station bracket as shown in the illustration in relation to the docking station rack.
2.	Slightly press the holder into the docking station rack. A click can be felt when the holder is secure.

3.1.7



Connecting to a Personal Computer





Microsoft ActiveSync (for PCs with Windows XP operating system) or Windows Mobile Device Center (for PCs with Windows Vista or Windows 7 operating system) is the synchronisation software for Windows mobile-based pocket PCs. Microsoft ActiveSync or Windows Mobile Device Center enables a PC and a Windows mobile-based pocket PC to communicate.

**Install Leica Viva
USB drivers**


Step	Description
1.	Start the PC.
2.	Insert the Leica Viva Series DVD.
3.	<p>Run the SetupViva&GR_USB_XX.exe to install the drivers necessary for Leica Viva devices. Depending on the version (32bit or 64bit) of the operating system on your PC, you have to select between the three setup files following:</p> <ul style="list-style-type: none">• SetupViva&GR_USB_32bit.exe• SetupViva&GR_USB_64bit.exe• SetupViva&GR_USB_64bit_itanium.exe <p> The setup has to be run only once for all Leica Viva devices.</p>

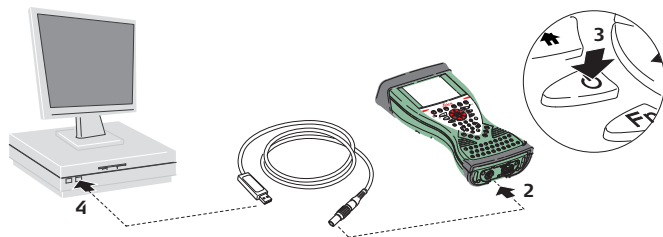

Step	Description
4.	The Welcome to InstallShield Wizard for Leica Viva & GR USB drivers window appears.  Ensure that all Leica Viva devices are disconnected from your PC before you continue!
5.	Next>.
6.	The Ready to Install the Program window appears.
7.	Install. The drivers will be installed on your PC.  For PCs with Windows Vista or Windows 7 operating system: If not already installed, Windows Mobile Device Center will be installed additionally.
8.	The InstallShield Wizard Completed window appears.
9.	Check I have read the instructions and click Finish to exit the wizard.



Connect USB cable to PC for the first time step-by-step

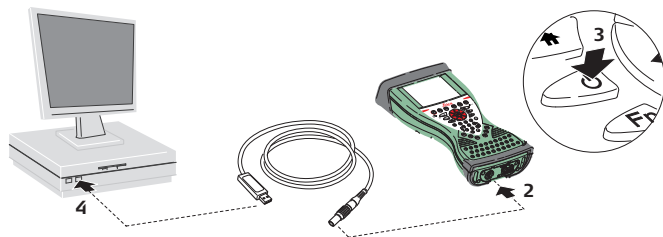Step	Description
1.	Start the PC.
2.	Plug the GEV234 cable into CS field controller.  For CS field controllers with DSUB9 connector, the GEV223 cable has to be used.
3.	Turn on the CS field controller.
4.	Plug the GEV234 cable into the USB port of the PC. The Found New Hardware Wizard starts up automatically.
5.	Check Yes, this time only. Next> .

Step	Description
6.	Check Install the software automatically (Recommended). Next> . The software for Remote NDIS based LGS CS Device will be installed on your PC.
7.	Finish.
8.	The Found New Hardware Wizard starts up automatically a second time.
9.	Check Yes, this time only. Next> .
10.	Check Install the software automatically (Recommended). Next> . The software for LGS CS USB Device will be installed on your PC.
11.	Finish.
	For PCs with Windows XP operating system:
12.	Run the ActiveSync installation program if not already installed.
13.	Allow USB connections inside the Connection Settings window of ActiveSync.
	For PCs with Windows Vista or Windows 7 operating system:
14.	Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.

**Connect to PC via
USB cable step-by-
step**



Step	Description
1.	Start the PC.
2.	Plug the GEV234 cable into CS field controller.  For CS field controllers with DSUB9 connector, the GEV223 cable has to be used.
3.	Turn the CS field controller on.
4.	Plug the GEV234 cable into the USB port of the PC.
	For PCs with Windows XP operating system:  ActiveSync starts up automatically. If does not start automatically, start ActiveSync. If not already installed, run the ActiveSync installation program.

Step	Description
5.	Allow USB connections inside the Connection Settings window of ActiveSync.
6.	Click Explore in ActiveSync.
	 The folders on the CS field controller are displayed under Mobile Devices . The folders of the data storage device can be found in StorageCard .
	For PCs with Windows Vista or Windows 7 operating system:
	 Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.



3.2

Power Functions



Turning CS field controller on

Press and hold power key () for 2 s.
 CS field controller must have a power supply.



Turning CS field controller off


Press and hold power key () for 5 s.
 CS field controller must be on.

Putting CS field controller into stand-by

Press and hold power key () < 2 s.
 CS field controller must be on.

Power Options menu

Press and hold power key () for 2 s to open **Power Options** menu.
 CS field controller must be on.

Option	Description
Turn off	Turn CS field controller off.
Stand-by	Put CS field controller into stand-by mode.  In stand-by mode, CS field controller shuts down and reduces power consumption. Rebooting from stand-by mode is quicker than a cold start after turning off.

Option	Description
Lock keyboard	Lock the keyboard. Option turns to Unlock keyboard .
Turn off touch screen	Disable touch screen. Option turns to Turn on touch screen .
Reset...	Perform one of the following options: <ul style="list-style-type: none"> • Restart (restarts Windows CE) • Reset Windows CE (resets Windows CE and communication settings to factory defaults) • Reset installed software (resets settings of all installed software) • Reset Windows CE and installed software (resets Windows CE and settings of all installed software)

3.3 Batteries

3.3.1 Operating Principles

Charging / first-time use

- The battery must be charged prior to using it for the first time because it is delivered with an energy content as low as possible.
 - The permissible temperature range for charging is between 0°C to +40°C/ +32°F to +104°F. For optimal charging, we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
 - It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery if the temperature is too high.
 - For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make only one charge/discharge cycle.
 - For Li-Ion batteries, a single discharging and charging cycle is sufficient. We recommend carrying out the process when the battery capacity indicated on the charger or on a Leica Geosystems product deviates significantly from the actual battery capacity available.
-


Operation / Discharging


- The batteries can be operated from -20°C to +55°C/-4°F to +131°F.
 - Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery.
-

3.3.2

Changing the Battery


Insert and remove the battery on the CS field controller step-by-step

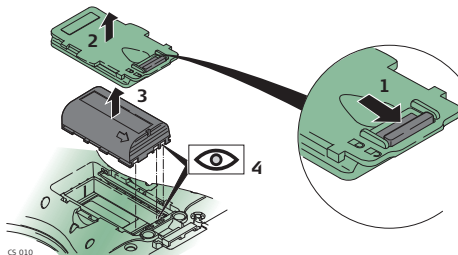


Step	Description
	Turn CS field controller over to gain access to the battery compartment.
1.	Push the slide fastener in the direction of the arrow with the open-lock symbol.
2.	Open the battery compartment.
3.	Pull the battery from the battery compartment.
4.	Place the battery into the battery compartment with the Leica logo facing to the top.

Step	Description
5.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.

Insert and remove the battery on the GG03 step-by-step

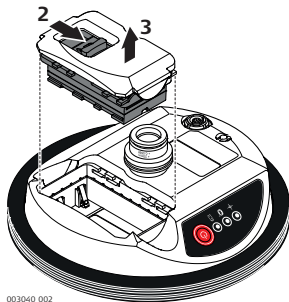

003040_002

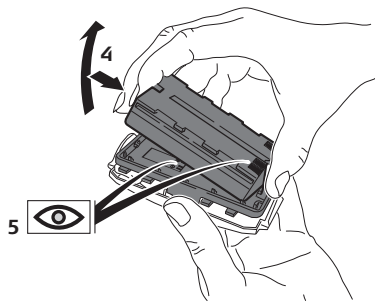

Step	Description
1.	Turn GG03 over to gain access to the battery compartment.
2.	Open the battery compartment by pushing the slide fastener in the direction of the arrow with the open-lock symbol.

Step	Description
3.	Pull out the battery housing. The battery is attached to the housing.
4.	Hold the battery housing and pull the battery from the battery housing.
5.	A polarity of the battery is displayed inside the battery housing. This is a visual aid to assist in placing the battery correctly.
6.	Place the battery onto the battery housing, ensuring that the contacts are facing outward. Click the battery into position.
7.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.

3.3.3

Charging the Battery


Charge battery step-by-step


A



CS_024

B

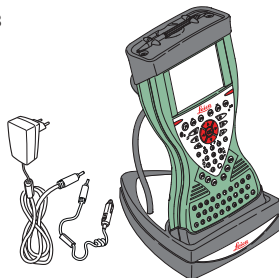

Step	Description
1.	Connect the GEV235 power adapter or GDC221 car adapter with the CS field controller (A) or the docking station (B) and an A/C plug.
2.	The power LED on the CS field controller switches on. When CS field controller's battery is fully charged the LED switches off again.  Refer to "LED Indicators on CS10/CS15" for information about the power LED.



The following advice is only valid for battery charger, power adapter and car adapter.



WARNING

If you open the product, either of the following actions may cause you to receive an electric shock.

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs

Precautions:

Do not open the product. Only Leica Geosystems authorised service workshops are entitled to repair these products.



The following advice is only valid for batteries, power adapter or docking station.

3.4

Working with the Memory Device




- Keep the card dry.
- Use it only within the specified temperature range.
- Do not bend the card.
- Protect the card from direct impacts.





Failure to follow these instructions could result in data loss and/or permanent damage to the card.

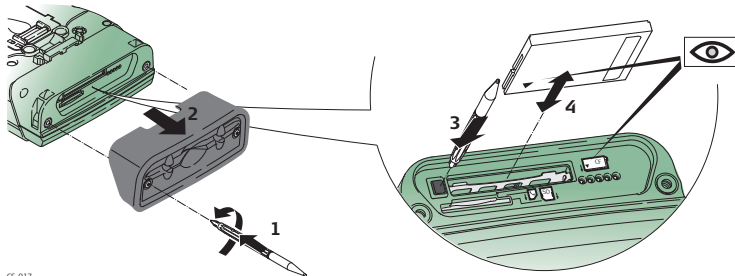
Insert and remove a CompactFlash card step-by-step





CS_017

Step	Description
	The CompactFlash card is inserted into a slot inside the top of the CS10/CS15.
1.	Refer to "Fixing the slot cover to the CS step-by-step". Loosen the screws inside the slot cover on top of the CS10/CS15 using the screwdriver end of the stylus.
2.	Detach the slot cover from the CS10/CS15.
3.	Slide the card firmly into the slot until it clicks into position.  Do not force the card into the slot.
4.	The card must be held with the contacts facing the slot.
5.	Attach the slot cover and tighten the screws.
6.	To remove the card, detach the slot cover of the CS10/CS15.
7.	Press the eject button next to the card slot twice.
8.	Remove the CompactFlash card and attach the slot cover.

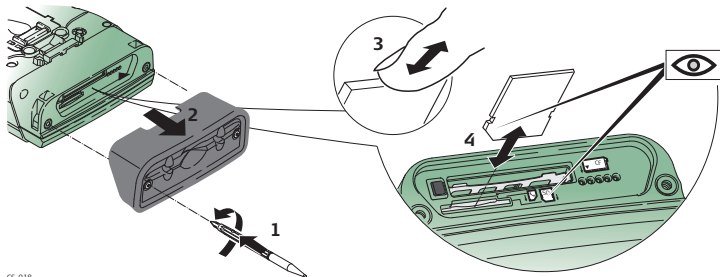Insert and remove an SD card step-by-step



CS_018

Step	Description
	The SD card is inserted into a slot inside the top of the CS10/CS15.
1.	Refer to "Fixing the slot cover to the CS step-by-step". Loosen the screws inside the slot cover on top of the CS10/CS15 using the screwdriver end of the stylus.
2.	Detach the slot cover from the CS10/CS15.
3.	Slide the card firmly into the slot until it clicks into position.  Do not force the card into the slot.
4.	The card must be held with the contacts facing the slot.

Step	Description
5.	Attach the slot cover and tighten the screws.
6.	To remove the card, detach the slot cover of the CS10/CS15.
7.	Gently press the top of the card to release it from the slot.
8.	Remove the SD card and attach the slot cover.

3.5


LED Indicators on CS10/CS15

LED indicators

Description

The CS field controller has **L**ight **E**mitting **D**iode indicators. They indicate the basic field controller status.

Diagram

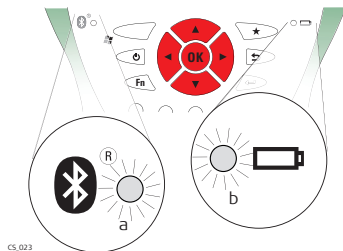

- a) Bluetooth LED
- b) Power LED

Description of the LEDs

IF the	is	THEN
Bluetooth LED	green	Bluetooth is in data mode and ready for connecting.
	purple	Bluetooth is connecting.
	blue	Bluetooth has connected.
	flashing blue	data is being transferred
Power LED	off	power is off.
	green	power is okay.
	flashing green	power is okay. The battery is being charged.
	yellow	power is low. The remaining time for which enough power is available depends on the use of wireless modules, the temperature and the age of the battery.
	flashing yellow	power is low. The remaining time for which enough power is available depends on the use of wireless modules, the temperature and the age of the battery. The battery is being charged.
	red	power is very low. The battery should be changed.
	flashing red	power is very low. The battery is being charged.


3.6 LED Indicators on GG03

LED indicators

Description

The GG03 instrument has **L**ight **E**mitting **D**iode indicators. They indicate the basic instrument status.

Diagram

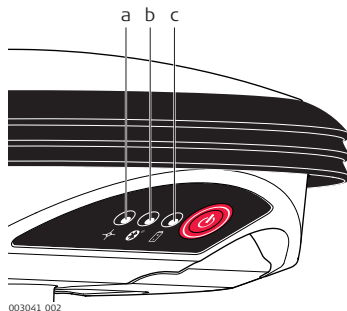

- a) Tracking LED (TRK)
- b) Bluetooth LED (BT)
- c) Power LED (PWR)

Description of the LEDs


IF the	is	THEN
TRK LED	off	No satellites are tracked.
	flashing green	Less than four satellites are tracked, a position is not yet available.
	green	Enough satellites are tracked to compute a position.
	red	GG03 instrument is initialising.
BT LED	green	Bluetooth is in data mode and ready for connecting.
	purple	Bluetooth is connecting.
	blue	Bluetooth has connected.
	flashing blue	Data is being transferred.
PWR LED	off	Power is off.
	green	Power is 100% - 20%.
	red	Power is 20% - 5%.
	flashing red	Power is low (< 5%). The remaining time for which enough power is available depends on the type of survey, the temperature and the age of the battery.

3.7 Using the Digital Camera


Overview

Both CS field controllers are equipped with a digital camera located at the underside (refer to "1.4 CS Components"). If a hand strap or pole holder plate is mounted, the camera view is not limited. The camera application can be started from the desktop icon **Camera** or from the Start menu **Start - Programs - Camera**.

Taking a picture step-by-step

Step	Description
1.	Aim the camera to the desired target.
2.	Check the view at the display.
3.	Press OK or click Capture to take the picture.  Capture changes to Save .
4.	Press OK again or click Save to open the Save As dialog.
5.	Click Discard to reject the picture.

Storing a picture step-by-step

Step	Description
	The Save As dialog is Windows CE standard and allows to name the picture, choose the location or to create a folder.

Step	Description
1.	Browse to the desired folder or create a new one.
2.	Name the picture.
3.	Press OK to save it and return to the camera view.
4.	Press Cancel to reject the picture and to return to the camera view without saving the picture.

4 Care and Transport

4.1 Transport

Transport in a road vehicle

Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container and secure it.

Shipping

When transporting the product by rail, air or sea, always use the complete original Leica Geosystems packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.

Shipping, transport of batteries

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.

Product

Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "6 Technical Data" for information about temperature limits.

Li-Ion batteries

- Refer to "6 Technical Data" for information about storage temperature range.
 - Remove batteries from the product and the charger before storing.
 - After storage recharge batteries before using.
 - Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.
 - A storage temperature range of -20°C to +30°C/-4°F to 86°F in a dry environment is recommended to minimise self-discharging of the battery.
 - At the recommended storage temperature range, batteries containing a 50% to 100% charge can be stored for up to one year. After this storage period the batteries must be recharged.
-

4.3



Cleaning and Drying

Product and accessories

- Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components.

Damp products

Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C/104°F and clean them. Remove the battery cover and dry the battery compartment. Do not repack until everything is dry. Always close the transport container when using in the field.

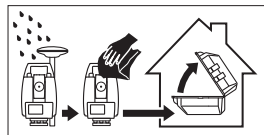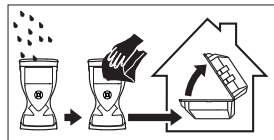

Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

Connectors with dust caps

Wet connectors must be dry before attaching the dust cap.

5 Safety Directions

5.1 General Introduction

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

5.2

Definition of Use

Intended use

- Remote control of product.
 - Data communication with external appliances.
-

Adverse use

- Use of the product without instruction.
 - Use outside of the intended use and limits.
 - Disabling safety systems.
 - Removal of hazard notices.
 - Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.
 - Modification or conversion of the product.
 - Use after misappropriation.
 - Use of products with recognisable damages or defects.
 - Use with accessories from other manufacturers without the prior explicit approval of Leica Geosystems.
 - Inadequate safeguards at the working site.
 - Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.
-

5.3

Limits of Use

Environment

Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.



DANGER

Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.



The following advice is only valid for battery charger, power adapter and car adapter.

Environment

Suitable for use in dry environments only and not under adverse conditions.



5.4

Responsibilities

Manufacturer of the product

Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.

Person responsible for the product

The person responsible for the product has the following duties:

- To understand the safety instructions on the product and the instructions in the user manual.
 - To ensure that it is used in accordance with the instructions.
 - To be familiar with local regulations relating to safety and accident prevention.
 - To inform Leica Geosystems immediately if the product and the application becomes unsafe.
 - To ensure that the national laws, regulations and conditions for the operation of e.g. radio transmitters, lasers are respected.
-



WARNING

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.

The product is a class A product when operated with the internal batteries. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

5.5

Hazards of Use



DANGER

Because of the risk of electrocution, it is dangerous to use poles and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.



WARNING

During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

Precautions:

The person responsible for the product must make all users fully aware of the existing dangers.



WARNING

Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.

Precautions:

Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.

**CAUTION**

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

Precautions:

When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.

Avoid subjecting the product to mechanical stress.

**WARNING**

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:

Do not use the product in a thunderstorm.

**CAUTION**

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are

observed. Before transportation or shipping contact your local passenger or freight transport company.



WARNING

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

Precautions:

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.



WARNING

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metalized paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

Make sure that the battery terminals do not come into contact with metallic objects.



The following advice is only valid for battery charger, power adapter and car adapter.



WARNING

If you open the product, either of the following actions may cause you to receive an electric shock.

- Touching live components
- Using the product after incorrect attempts were made to carry out repairs

Precautions:

Do not open the product. Only Leica Geosystems authorised service workshops are entitled to repair these products.



The following advice is only valid for batteries, power adapter or docking station.

**WARNING**

The product is not designed for use under wet and severe conditions. If unit becomes wet it may cause you to receive an electric shock.

Precautions:

Use the product only in dry environments, for example in buildings or vehicles. Protect the product against humidity. If the product becomes humid, it must not be used!


**WARNING**

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third

parties to the risk of severe injury and rendering the environment liable to contamination.

Precautions:

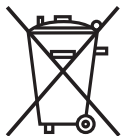

The product must not be disposed with household waste.
Dispose of the product appropriately in accordance with the national regulations in force in your country.
Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information can be downloaded from the Leica Geosystems home page at <http://www.leica-geosystems.com/treatment> or received from your Leica Geosystems dealer.



WARNING

Only Leica Geosystems authorised service workshops are entitled to repair these products.

5.6

Electromagnetic Compatibility EMC

Description

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.



WARNING

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.

The product is a class A product when operated with the internal batteries. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



CAUTION

There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers or other electronic equipment, non-standard cables or external batteries.

Precautions:

Use only the equipment and accessories recommended by Leica Geosystems. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

**CAUTION**

Disturbances caused by electromagnetic radiation can result in erroneous measurements.

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.

Precautions:

Check the plausibility of results obtained under these conditions.

**CAUTION**

If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.

Precautions:

While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.

**Radios or digital
cellular phones****WARNING**

Use of product with radio or digital cellular phone devices:

Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals.

Precautions:

Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.

- Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
 - Do not operate the product with radio or digital cellular phone devices near to medical equipment.
 - Do not operate the product with radio or digital cellular phone devices in aircraft.
-

**WARNING**

The greyed paragraph below is only applicable for products without radio.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-




WARNING

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.


Labelling CS10

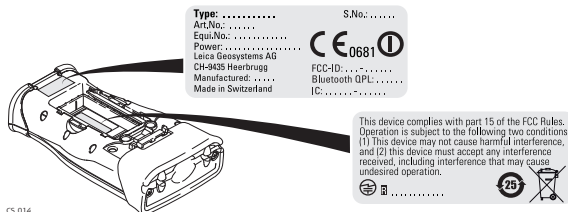

Labelling CS15

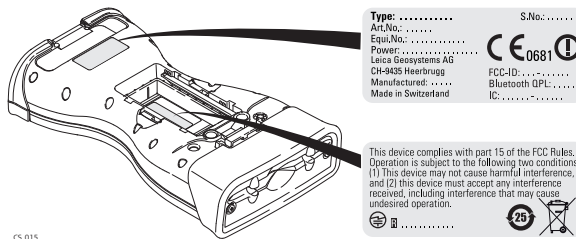

Labelling GS05, GS06

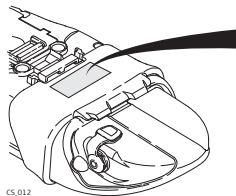


CS_012

Type: Art.No.:
 Equi.No.: S.No.:
 Leica Geosystems AG
 CH-9435 Heerbrugg
 Manufactured:
 Made in Canada



Labelling GG03

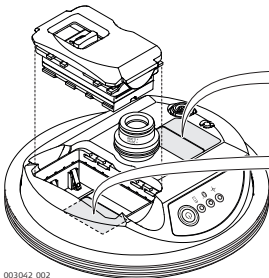

003042_002

This device contains
 a transmitter:
 IC: 5225A-0525
 FCC-ID: PVI0525
 Bluetooth QD-ID: B016013



This device complies with part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference AND
 (2) This device must accept any interference
 received, including interference that may cause
 undesired operation.
 Advisory notice: this receiver uses P-code signal, which
 by U.S. policy, may be switched OFF without notice


Type: Art.No.:
 Equip. No.: S.No.:

Power: 12V \pm nominal 0.3 A max.

Leica Geosystems AG
 CH-9435 Heerbrugg

Manufactured: 200X
 Made in Switzerland

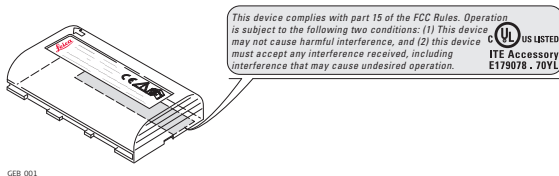

Labelling internal battery GEB211, GEB212

GEB_001

Exposure to radio frequency (RF) signals

The wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limit for exposure to radio frequency (RF) energy set by the OET Bulletin 65 Supplement C / Ministry of Health (Canada), Safety Code 6. These limits are part of comprehensive guidelines and established permitted levels of RF energy for the general population. These guidelines are based on the safety standards previously set by international standard bodies. These standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This device has been shown to be capable of compliance for localised specific absorption rate (SAR) for uncontrolled environment / general public exposure limits specific in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement procedures specified in IEEE Std. 1528-2003.

SAR compliance for body-worn operating configurations is limited to specific belt-clips, holsters or similar accessory configurations that have no metallic component in

the assembly providing at least 1.0 cm separation distance between the device and the body of the user.

6

Technical Data

6.1

CS10/CS15 Technical Data

Design

Glass reinforced polymer housing with optional integrated battery.

Control unit

CS10

Display:	VGA (480 x 640 pixels), graphics capable LCD, illumination, touch screen, colour
Keyboard:	26 keys, illumination
Touch screen:	Toughened film on glass
Sound:	Integrated sealed speaker and microphone
Digital camera:	Resolution: 1600 x 1200 pixels, fixed focus lens, image capture: JPEG

CS15

Display:	VGA (640 x 480 pixels), graphics capable LCD, illumination, touch screen, colour
Keyboard:	65 keys including 12 function keys, illumination
Touch screen:	Toughened film on glass
Sound:	Integrated sealed speaker and microphone

Digital camera:

Resolution: 1600 x 1200 pixels, fixed focus lens, image capture: JPEG

Dimensions

Type	Length [m]	Width [m]	Thickness [m]
CS10	0.200	0.102	0.045
CS15	0.245	0.125	0.045

Weight

Type	Weight [kg]/[lbs]
CS10, with battery	0.688/1.517
CS15, with battery	0.838/1.847

Recording

Data can be recorded on the SD card, CompactFlash card, USB stick or in the internal memory.

Power

Type	Consumption [W]	External supply voltage
CS10/CS15	2.0	Nominal voltage 12 V DC (---) Voltage range 10.5 V-28 V

Internal battery

Type	Battery	Voltage	Capacity	Operating time, typical*
CS10/CS15	Li-Ion	7.4 V	GEB212: 2.6 Ah	10 h

* Operating time depends on use of wireless communication devices.

Environmental specifications**Temperature**

Type	Operating temperature [°C]	Storage temperature [°C]
CS10/CS15	-30 to +60	-40 to +80
Internal battery	-20 to +55	-40 to +70

Protection against water, dust and sand

Type	Protection
CS10/CS15	IP67 (IEC60529) Dust tight Waterproof to 1 m temporary immersion

Humidity

Type	Protection
CS10/CS15	Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out CS10/CS15.

Interfaces

Type	RS232	USB Host	USB OTG	Bluetooth	WLAN
CS10/CS15	LEMO port or DSUB9	LEMO port or USB A	LEMO port, USB Mini-AB or docking station contacts	Class 2	802.11b/g

Data format for RS232

The default values are:

Baud rate:	115200
Parity:	None
Terminator:	CR/LF
Data bits:	8
Stop bits:	1

Ports

Type	8 pin LEMO-1	DSUB9	USB A Host	USB Mini	Docking station contacts
CS10/CS15	For power and/or communication	For communication			For power and/or communication

6.2

GS05/GS06 Technical Data

6.2.1

Tracking Characteristics

Instrument technology

SmartTrack+

Satellite reception

Single frequency

Instrument channels

GS05/GS06: Up to 14 channels continuous tracking on L1 (GPS); up to 14 channels continuous tracking on L1 (GLONASS); one channel tracking SBAS.



Depending on the satellite systems and signals configured, a maximum number of 14 channels is allocated.

Supported codes and phases

GPS

Type	L1
GS05/GS06	Carrier phase, C/A-code

GLONASS

Type	L1
GS05/GS06	Carrier phase, C/A-code



Carrier phase and code measurements on L1 (GPS) are fully independent with AS on or off.

Satellites tracked

GS05/GS06:	Up to 14 simultaneously on L1 (GPS) + up to 14 simultaneously on L1 (GLONASS) + up to one SBAS
------------	--

6.2.2



Accuracy

Accuracy is dependent upon various factors including the number of satellites tracked, constellation geometry, observation time, ephemeris accuracy, ionospheric disturbance, multipath and resolved ambiguities.

The following accuracies, given as **root mean square**, are based on measurements processed using LGO and on real-time measurements.

The use of multiple GNSS systems can increase accuracy by up to 30% relative to GPS only.

Differential code

The baseline precision of a differential code solution for static and kinematic surveys is 40 cm. The measurement of accuracy is compliant with ISO 17123-8.

6.2.3

Technical Data

Description and use

The table gives a description and the intended use of the GS05/GS06.

Type	Description	Use
GS05	L1 GPS, GLONASS SmartTrack+ antenna.	With CS10 field controller.
GS06	L1 GPS, GLONASS SmartTrack+ antenna.	With CS15 field controller.

Dimensions

Type	Length [m]	Width [m]	Thickness [m]
Zeno 10 (GS05 with CS10)	0.278	0.102	0.045
Zeno 15 (GS06 with CS15)	0.323	0.125	0.045

Connector

5 pin interface port

Weight

Type	Weight [kg]/[lbs]
Zeno 10 (GS05 with CS10)	0.750/1.653
Zeno 15 (GS06 with CS15)	0.910/2.006

Power

Power consumption:	0.5 W typically, 45 mA
External supply voltage:	Nominal 12 V DC (≡), voltage range 5 V-28 V DC

Electrical data

Type	GS05/GS06
Voltage	-
Current	-
Frequency	GPS L1 1575.42 MHz GLONASS L1 1602.5625 MHz-1611.5 MHz
Gain	Typically 27 dBi
Noise Figure	Typically < 2 dBi

**Environmental
specifications****Temperature**

Operating temperature [°C]	Storage temperature [°C]
-30 to +60	-40 to +80

Protection against water, dust and sand

Protection
IP67 (IEC 60529) Dust tight Protected against water jets Waterproof to 1 m temporary immersion

Humidity

Protection
Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the antenna.

6.3

6.3.1

GG03 Technical Data

Tracking Characteristics

Satellite reception

GG03: L1 only / L1 + L2 (depending on the license)

Instrument channels

GG03: Up to 16 channels continuous tracking on L1, L2 (GPS); up to 14 channels continuous tracking on L1 and L2 (GLONASS); four channels tracking SBAS (EGNOS, WAAS, MSAS, GAGAN).



Depending on the satellite systems and signals configured, a maximum number of 120 channels is allocated.

Supported codes and phases

GPS

Type	L1	L2
GG03	Carrier phase, C/A-code	Carrier phase, C code (L2C) and P2-code

GLONASS

Type	L1	L2
GG03	Carrier phase, C/A-code	Carrier phase, P2-code



Carrier phase and code measurements on L1, L2 and L5 (GPS) are fully independent with AS on or off.

Satellites tracked

GG03: Up to 16 simultaneously on L1, L2 (GPS) + up to 14 simultaneously on L1 and L2 (GLONASS)+ up to four SBAS (EGNOS, WAAS, MSAS, GAGAN)

6.3.2

Accuracy



Accuracy is dependent upon various factors including the number of satellites tracked, constellation geometry, observation time, ephemeris accuracy, ionospheric disturbance, multipath and resolved ambiguities.

The following accuracies, given as **root mean square**, are based on measurements processed using Zeno Office and on real-time measurements.

The use of multiple GNSS systems can increase accuracy by up to 30% relative to GPS only.

Differential code

The baseline precision of a differential code solution for static and kinematic surveys is 25 cm.



The measurement of accuracy is compliant with ISO 17123-8.

Accuracy

Post-processed accuracy

Type	Accuracy
Baseline mode L1 Phase	10 mm + 2 ppm RMS*

Horizontal real-time accuracy (SBAS or external source)

Type	Accuracy
SBAS (L1 only)	< 0.9 m*
DGNSS (L1 only)	< 40 cm*
RTK (L1/L2)	< 1 cm + 2 ppm*

Vertical real-time accuracy

Type	Accuracy
RTK (L1/L2)	< 2 cm + 2 ppm*

- * Measurement precision, accuracy and reliability depends upon various factors including number of available satellites, geometry proximity to base station, multipath effects or ionospheric conditions
-

6.3.3

Technical Data

Description and use

The table gives a description and the intended use of the GG03.

Type	Description	Use
GG03	L1, L2 GPS, GLONASS SmartTrack+ antenna.	With Zeno 5, CS10, CS15 or CS25 field controller.

Dimensions

Height: 0.071 m
Diameter: 0.186 m

Connector

- 8 pin LEMO-1

Mounting

5/8" Whitworth

Weight

0.8 kg including internal battery

Power

Power consumption: 2.0 W typically
External supply voltage: Nominal 12 V DC (---), voltage range 10.5 V-28 V

Battery internal

Type: Li-Ion
Voltage: 7.4 V

Capacity:	GEB211: 2.2 Ah GEB212: 2.6 Ah
Typical operating time:	10 h (GNSS only)* 8 h (RTK)*

* May vary with temperature, battery age or usage

Electrical data

Type	GG03
Frequency	
GPS L1 1575.42 MHz	✓
GPS L2 1227.60 MHz	✓
GPS L5 1176.45 MHz	-
GLONASS L1 1602.5625-1611.5 MHz	✓
GLONASS L2 1246.4375-1254.3 MHz	✓
Galileo E1 1575.42 MHz	-
Galileo E5a 1176.45 MHz	-
Galileo E5b 1207.14 MHz	-
Galileo Alt-BOC 1191.795 MHz	-
Gain	Typically 37 dBi

Environmental specifications

Type	GG03
Noise Figure	Typically < 3 dBi

Temperature

Operating temperature [°C]	Storage temperature [°C]
-40 to +65 Bluetooth: -30 to +65	-40 to +80

Protection against water, dust and sand

Protection
IP67 (IEC 60529) Dusttight Protected against water jets Waterproof to 1 m temporary immersion

Humidity

Protection
Up to 100 %

Protection

The effects of condensation are to be effectively counteracted by periodically drying out the antenna.

6.4

Antennas Technical Data

Description and use

The table gives a description and the intended use of the antenna.

Type	Description	Use
AS05	L1 GPS, GLONASS SmartTrack+ antenna with built-in ground plane.	With CS10/GS05, CS15/GS06.

Dimensions

Type	AS05
Height	6.2 cm
Diameter	17.0 cm

Connector

AS05: TNC female

Mounting

AS05: 5/8" Whitworth

Weight

AS05: 0.4 kg

Electrical data

Type	AS05
Voltage	4.5 V to 18 V DC
Current	35 mA typical
Frequency	GPS L1 1575.42 MHz GLONASS L1 1602.5625 MHz-1611.5 MHz
Gain (typically)	27 dBi
Noise Figure (typically)	< 2 dBi

Environmental specifications**Temperature**

Type	Operating temperature [°C]	Storage temperature [°C]
AS05	-40 to +70	-55 to +85

Protection against water, dust and sand

Type	Protection
AS05	IP67 (IEC 60529) Dust tight Protected against water jets

Type	Protection
	Waterproof to 1 m temporary immersion

Humidity

Type	Protection
AS05	Up to 100 % The effects of condensation are to be effectively counter-acted by periodically drying out the antenna.

Cable length

Separation distance from instrument ...	to antenna	Supplied cable lengths [m]
GS05/GS06	AS05	1.2

6.5

Conformity to National Regulations

6.5.1

CS10

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product CS10 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
CS10, Bluetooth	2402 - 2480
CS10, 3.5G GSM/UMTS	UMTS/HSDPA (WCDMA/FDD) 850 / 1900 / 2100 Quad-Band EGSM 850 / 900 / 1800 / 1900 GPRS multi-slot class 12 EDGE multi-slot class 12

Type	Frequency band [MHz]
CS10, WLAN	2400 - 2484

Output power

Type	Output power [mW]
CS10, Bluetooth	2.5
CS10, 3.5G GSM/UMTS EGSM850/900	2
CS10, 3.5G GSM/UMTS GSM1800/1900	1
CS10, 3.5G GSM/UMTS UMTS2100	0.25
CS10, 3.5G GSM/UMTS EDGE850/900	0.5
CS10, 3.5G GSM/UMTS EDGE1800/1900	0.4
CS10, WLAN (802.11b)	50
CS10, WLAN (802.11g) 6 Mbit/s-36 Mbit/s	50
CS10, WLAN (802.11b) 48 Mbit/s-56 Mbit/s	31.6

Antenna

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
CS10, Bluetooth	Integrated antenna	-	-	-
CS10, 3.5G GSM/UMTS	Integrated antenna	-	-	-
CS10, WLAN	Integrated antenna	-	-	-
GS05	Internal GNSS antenna element (receive only)	-	-	-

6.5.2

CS15

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product CS15 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
CS15, Bluetooth	2402 - 2480
CS15, 3.5G GSM/UMTS	UMTS/HSDPA (WCDMA/FDD) 850 / 1900 / 2100 Quad-Band EGSM 850 / 900 / 1800 / 1900 GPRS multi-slot class 12 EDGE multi-slot class 12
CS15, WLAN	2400 - 2484

Output power

Type	Output power [mW]
CS15, Bluetooth	2.5
CS15, 3.5G GSM/UMTS EGSM850/900	2
CS15, 3.5G GSM/UMTS GSM1800/1900	1
CS15, 3.5G GSM/UMTS UMTS2100	0.25
CS15, 3.5G GSM/UMTS EDGE850/900	0.5
CS15, 3.5G GSM/UMTS EDGE1800/1900	0.4
CS15, WLAN (802.11b)	50
CS15, WLAN (802.11g) 6 Mbit/s-36 Mbit/s	50
CS15, WLAN (802.11b) 48 Mbit/s-56 Mbit/s	31.6

Antenna


Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
CS15, Bluetooth	Integrated antenna	-	-	-
CS15, 3.5G GSM/UMTS	Integrated antenna	-	-	-

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
CS15, WLAN	Integrated antenna	-	-	-
GS06	Internal GNSS antenna element (receive only)	-	-	-

6.5.3

GG03

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
 - Hereby, Leica Geosystems AG, declares that the product GG03 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.
-  Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.
- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
GG03	1227.60 1575.42 1246.4375 - 1254.3 1602.4375 - 1611.5
Bluetooth	2402 - 2480

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5 (Class 1)

Antenna

GNSS	Internal GNSS antenna element (receive only)
Bluetooth	Type: Internal Microstrip antenna Gain: 1.0 dBi

7

Software Licence Agreement

Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from Leica Geosystems. Such software is protected by copyright and other laws and its use is defined and regulated by the Leica Geosystems Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the Leica Geosystems Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the Leica Geosystems home page at <http://www.leica-geosystems.com/swlicense> or collected from your Leica Geosystems distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the Leica Geosystems Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you

purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

Appendix A Pin Assignments and Sockets


A.1 CS10/CS15

Description

Some applications require knowledge of the pin assignments for the CS10/CS15 ports.


In this chapter, the pin assignments and sockets for the ports of the CS10/CS15 are explained.

Ports at the instrument bottom panel - DSUB9 connector

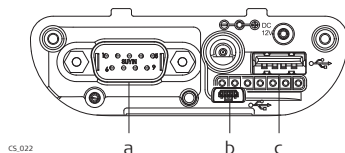

- a) DSUB9 port
- b) USB Mini port
- c) USB A Host port

Ports at the instrument bottom panel - Lemo connector

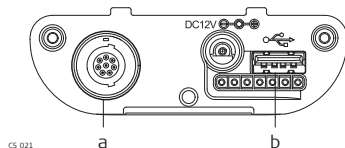

- a) Lemo port (USB and serial)
- b) USB A Host port

Pin assignments for RS232 serial port



PIN_002

Pin	Signal Name	Function	Direction
1	NC	Not connected	-
2	RxD	RS232, receive data	In
3	TxD	RS232, transmit data	Out
4	NC	Not connected	-
5	GND	Signal Ground	-
6	NC	Not connected	-
7	RTS	RS232, request to send	Out
8	CTS	RS232, clear to send	In
9	NC	Not connected	-

Pin assignments for 8 pin LEMO-1



PIN_001

Pin	Signal Name	Function	Direction
1	USB_D+	USB data line	In or out
2	USB_D-	USB data line	In or out
3	GND	Signal ground	-
4	RxD	RS232, receive data	In

Pin	Signal Name	Function	Direction
5	TxD	RS232, transmit data	Out
6	ID	Identification pin	In or out
7	PWR	Power input, 10.5 V-28 V	In
8	TRM_ON/USB_ID	RS232, general purpose signal	In or out

Sockets

9 pin RS232:	RS232, 9 pin, DB9
8 pin LEMO-1:	LEMO-1, 8 pin, LEMO EGI.1B.308.CLN

Description

Some applications require knowledge of the pin assignments for the instrument ports.

In this chapter, the pin assignments and sockets for the instrument ports are explained.

Port at the instrument underside

003044.002

a) Lemo port (USB and serial)

**Pin assignments
for 8 pin LEMO-1**

Pin	Signal Name	Function	Direction
1	USB_D+	USB data line	In or out
2	USB_D-	USB data line	In or out
3	GND	Signal ground	-
4	RxD	RS232, receive data	In
5	TxD	RS232, transmit data	Out
6	ID	Identification pin	In or out
7	PWR	Power input, 10.5 V-28 V	In
8	TRM_ON/USB_ID	RS232, general purpose signal	In or out

Sockets

8 pin LEMO-1:

LEMO-1, 8 pin, LEMO EGI.1B.308.CLN

Index

A

ActiveSync	42
Antennas	107
GG03	117
Operating Temperature	108
Storing Temperature	108
Type	107

B

Batteries	
Charge in CS10/CS15	54
Charging, first-time use	50
Operation, Discharging	50
Battery	
Change	51
Internal, GG03	103
Storage temperature	90
Bluetooth	
LED on CS10	60
LED on CS15	60
LED on GG03	62

C

CompactFlash card	
Insert	56
Memory device	19
Remove	56
Connector	
GG03	103
GS05	96
GS06	96
Connector, antennas	107
CS	
Available models	13
Display foil	33
Docking Station	25, 41
Firmware for all CS models	14
Lock keyboard	49
Operating principles	32
Power Options menu	48
Stand-by mode	48
System components	11
Unlock keyboard	49

CS10		Docking Station	
Operating temperature	90	Components	25
Status	60	Mounting	41
Storage temperature	90	Documentation	4
Underside	22	Drive	
Upside	21	PC card, on office computer	20
CS15		E	
Operating temperature	90	Electrical data	
Status	60	GG03	104
Storage temperature	90	Electrical Data	
Underside	24	GS05	97
Upside	23	GS06	97
D		Electrical data, antennas	108
Data transfer	20	Environmental specifications	
Definition of Use	71	Antenna	108
Description of the system	11	GG03	105
Digital Camera	64	GS05	98
Dimensions		GS06	98
Antennas	107	F	
GG03	103	FCC Statement	83
SmartAntenna	96	Firmware for GG03	14
Display foil	33	Frequency band	
		GG03	116

G

GEB211 (internal battery)	
Operating temperature	90
GEB212 (internal battery)	
Operating temperature	90
GG03	
Status	62
GS	
Firmware for GS05/GS06	14
GS05	
Operating Temperature	98
Storage Temperature	98
GS06	
Operating Temperature	98
Storage Temperature	98

H

Hand strap	35
Handheld GNSS	39

I

Indicators, LED	
CS10	60
CS15	60
GG03	62

Insert

CompactFlash card	56
SD card	58
SIM card	37
Internal memory	
Memory device	19

K

Key combinations	
Description of	30
Keyboard	
CS10 Graphical overview	26
CS15 Graphical overview	27
Operating principles	32
Keyboard illumination	
Turn off	31
Turn on	31
Keys	
Alpha keys	28
Arrow keys	30
Backspace key	28
Caps Lock	28
Description of	28
ENTER key	29

ESC key	28	Light Emitting Diode	
Favourites	29	CS10	60
Fn key	28	CS15	60
Function keys	28	GG03	62
Home	29	Li-Ion battery	103
Hot keys	28	Storage	67
Numeric keys	28		
OK	30	M	
ON/OFF	29	Memory device	
SPACE key	28	Available	19
		Microsoft ActiveSync	42
L		Mount, antennas	107
Labelling		Mount, GG03	103
CS10	84		
CS15	84	O	
GEB211	86	Operating Temperature	
GEB212	86	Antennas	108
GG03	85	CS10	90
GS05	85	CS15	90
GS06	85	GEB211 (internal battery)	90
		GEB212 (internal battery)	90
LED		GG03	105
CS10, description	61	GS05	98
CS15, description	61	GS06	98
GG03, description	63		

Output power	
GG03	117

P

PC card drive on office computer	20
Pin Assignment	120

Power

GG03	103
GS05	97
GS06	97

Power LED

CS10	60
CS15	60
GG03	62

Power supply	18
--------------------	----

R

Recording	89
-----------------	----

Remove

CompactFlash card	56
SD card	58
SIM card	37

Reset

Options	49
---------------	----

Responsibilities	73
------------------------	----

S

Safety Directions	70
-------------------------	----

Satellite reception	99
---------------------------	----

Screen brightness

Decrease	30
Increase	30

SD card

Insert	58
Memory device	19
Remove	58

SIM card

Insert	37
Remove	37

Slot Cover	36
------------------	----

Software

Upload	15
Software Licence Agreement	118

Specifications, environmental

Antennas	108
GS05	98
GS06	98
Status, CS10	60
Status, CS15	60
Status, GG03	62

Storage Temperature		Ports	92
CS10	90	Power supply	89
CS15	90	Weight	89
For internal battery GEB211	90	Temperature range	
For internal battery GEB212	90	Product, drying	68
GG03	105	Temperature, charging internal battery	50
GS05	98	Touch screen	
GS06	98	Turn off	49
Storing Temperature		Turn on	49
Antennas	108	Touch Screen, operating principles	32
T		Tracking LED	
Technical Data		GG03	62
CS10	88	Transfer data	20
CS15	88	U	
Dimensions	89	Upload software	15
Display and keyboard	88	USB stick	
Environmental specifications	90	Memory device	19
GG03	99	User Interface	26
GS05	93	User Manual	
GS06	93	Validity of	4
Interface	91	V	
Internal battery GEB211	90	Volume	
Internal battery GEB212	90	Decrease	30

Increase	30
----------------	----

W

Weight

Antennas	107
GG03	103
GS05	97
GS06	97

Windows CE

Reset registry	49
Restart	49

Windows Mobile Device Center

WLAN

Z

Zeno

Available models	12
------------------------	----

Zeno 10

Zeno 15

Total Quality Management: Our commitment to total customer satisfaction.



Leica Geosystems AG, Heerbrugg, Switzerland, has been certified as being equipped with a quality system which meets the International Standards of Quality Management and Quality Systems (ISO standard 9001) and Environmental Management Systems (ISO standard 14001).

Ask your local Leica Geosystems dealer/sales representative for more information about our TQM program.

Leica Geosystems AG

Heinrich-Wild-Strasse
CH-9435 Heerbrugg
Switzerland
Phone +41 71 727 31 31

www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems

777610-4.1.0en

Original text

**Published in Switzerland
© 2013 Leica Geosystems AG, Heerbrugg, Switzerland**